


Setting values

Main shift lever	from driver's door	c	mm	approx. 700
	from cab rear wall	d	mm	approx. 480

Adjusting main shift lever

- 26/434 **1** With the main shift lever in 0-position, select first/second gear in the shift gate and release bolts at the double joint.

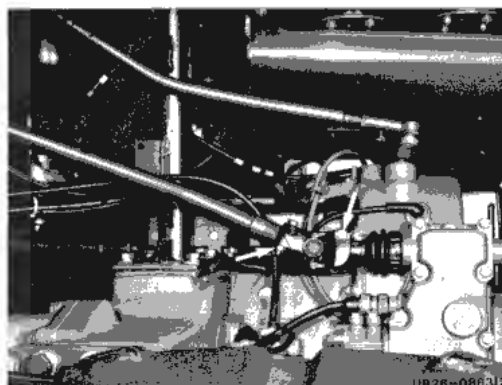

- 26/435 **2** Adjust main shift lever and tighten bolts at the double joint.

